Galaxy

SOLENO
MASTERING WATER SUSTAINABLY



EZ TEE - INSTALLATION GUIDE

STEP #1



Core hole using EZ Tee Hole Saw. Run drill in reverse to prevent recoil and provide a smoother edge on the cut. De-burr edges after drilling as required.

STEP #2



Insert EZ Tee Sleeve ensuring ribs are flush against the OD & ID of mainline pipe. Centerline marker should be perpendicular to pipe (12 o'clock position/top of hole).

STEP #3




Lubricate PVC Stub and inside of Boot using supplied EZ Tee Solution. (Use of alternative lubricant may void warranty) Insert Stub into the Sleeve. Align Sleeve & Stub using centerline markers.

STEP #4



Pound PVC Stub into the Sleeve until fully seated against the"EZ Stop" ring. Use wooden block or similar substitute to evenly distribute the impact force and prevent damage to the PVC Bell.

STEP #5

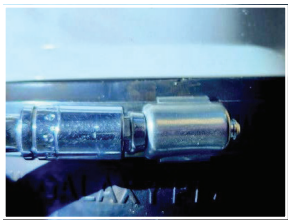

Fully tighten the stainless steel clamp to complete the installation.



DIM. SEAT		DIA. DRILLING	
INCHES	MM	INCHES	MM
4"	100	4-1/2"	114.3
6"	150	6-1/2"	165.1
8"	200	8-3/4"	222.3
10"	250	10-7/8"	276.2
12"	300	12-7/8"	327.0
15"	375	15-13/16"	401.9

For more information about our products and services, please visit our website:

soleno.com